



Product Code: STAT.FROG.BEND

- ▲ Extended Intermediate brackets can be used to create corners with up to 30 degrees of cable deviation each side. The Extended Intermediate can be bent in any direction up to 30 degrees with a minimum bend radius of 260mm to ensure the shuttle passes. See below for bending instructions.
- ▲ Multiple Extended Intermediates can be used to create deviations of larger than 30 degrees, see manual online - [Link](#)



Bending Extended Intermediates

1. Install the Intermediate as per manual - see QR Code.
2. Align the end of the bender with the end of the intermediates tube.
3. Support the Intermediate to prevent it spinning and pull the handle of the bend to the desired angle.
4. Remove the bender and check the angle noting the tube will have some spring back.



safetylink.com




Catalogue



FrogLine Video



Safety Centre
Training

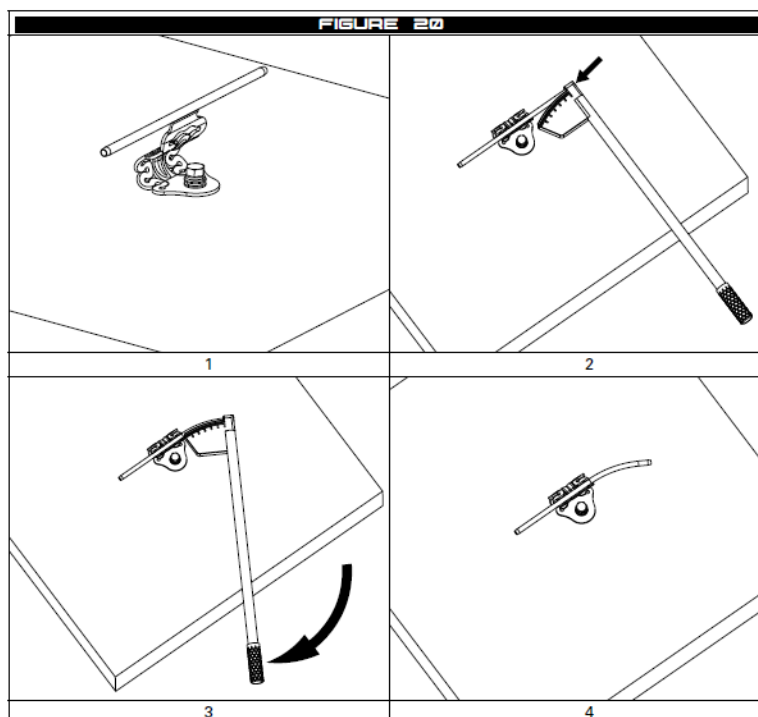

© 2018, SafetyLink Pty Ltd, Australia.

Patents: SafetyLink Pty Ltd has a multitude of patents, patents pending, design applications, trademarks and copyrighted documents both lodged and issued. Should you wish to know the progress of our intellectual property on a specific product please email us on ip@safetylink.com and quote the product code.

Doc ID: MKT-7924 Version: 2.0