




SafetyLink® Suspension Trauma Relief Straps

Product code: TRAUMA002

Application: SafetyLink's Suspension Trauma Relief Straps, are to be used in conjunction with a full body harness. Designed to prevent suspension trauma after a fall.




Step 1. (INSTALLATION)
Install straps at the junction of the shoulder strap and leg strap on the full body harness.

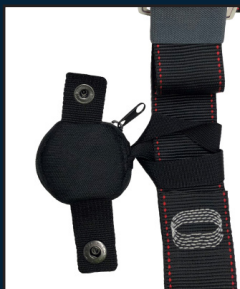

Step 2. Lay the exposed loop of the strap underneath the harness of the webbing. Pass the pouch through the loop.




Step 3. Button up pouch around webbing, ensuring the press stud is below the loop. Repeat the process on the other side, ensuring one pouch is marked hook and the other loop.

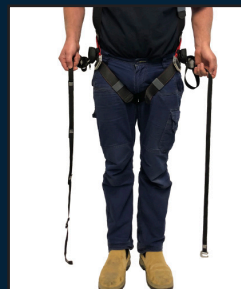

Step 4. (FOR USE)
Locate, unzip and deploy each pouch containing the suspension relief straps.



Step 5. Raise the ends of the two straps to reach the hook and loops. Fit the hook through the loop that will give you the required length and lower the straps.

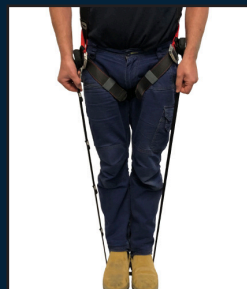

Step 6. Step onto the straps to relieve the pressure on the groin and legs. Repeat previous step if length is not suitable.

Suspension Trauma Relief Straps:

- ▲ Designed to prevent suspension trauma whilst a worker is awaiting rescue.
- ▲ The suspension trauma straps allow the worker to stand up in their harness and relieve the pressure to the arteries and veins around the top of the leg.
- ▲ The continuous loop design allows both sides of the harness to relieve the pressure being applied to the legs.

SafetyLink Pty Ltd **1300 789 545**
+61 2 4964 1068 info@safetylink.com



SAFETYLINK

A DELTA PLUS GROUP COMPANY

For further information please visit our website www.SafetyLink.com